


REMOVAL

1. REMOVE FREE WHEEL HUB COVER

- (a) Set the control handle FREE.

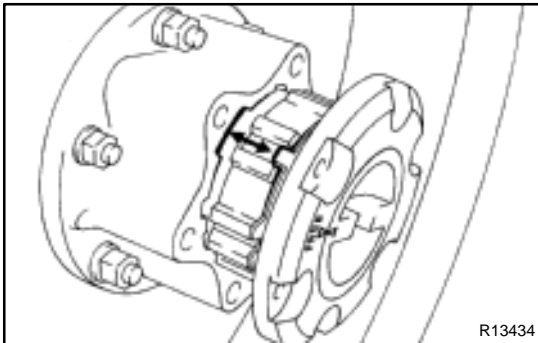

- (b) Remove the 6 cover mounting bolts and pull off the cover.
Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)

HINT:

At the time of installation, before installing the hub cover, apply the clutch spline with MP grease.

- (c) Remove the gasket.

2. REMOVE FREE WHEEL HUB BODY

- (a) Remove the 6 mounting nuts and washers.

Torque: 31 N·m (315 kgf-cm, 23 ft-lbf)



- (b) Using a brass bar and hammer, tap on the bolts head and remove the 6 cone washers.

- (c) Pull off the free wheel hub body.

- (d) Remove the gasket.