



INSPECTION

1. INSPECT COVER, HANDLE AND SEAL

Check the handle moves smoothly.

2. INSPECT INNER HUB

Place the cover in the body and check that the inner hub turns smoothly.